


# Fitting of the Ink Cartridge Piston by hand with Setting Device

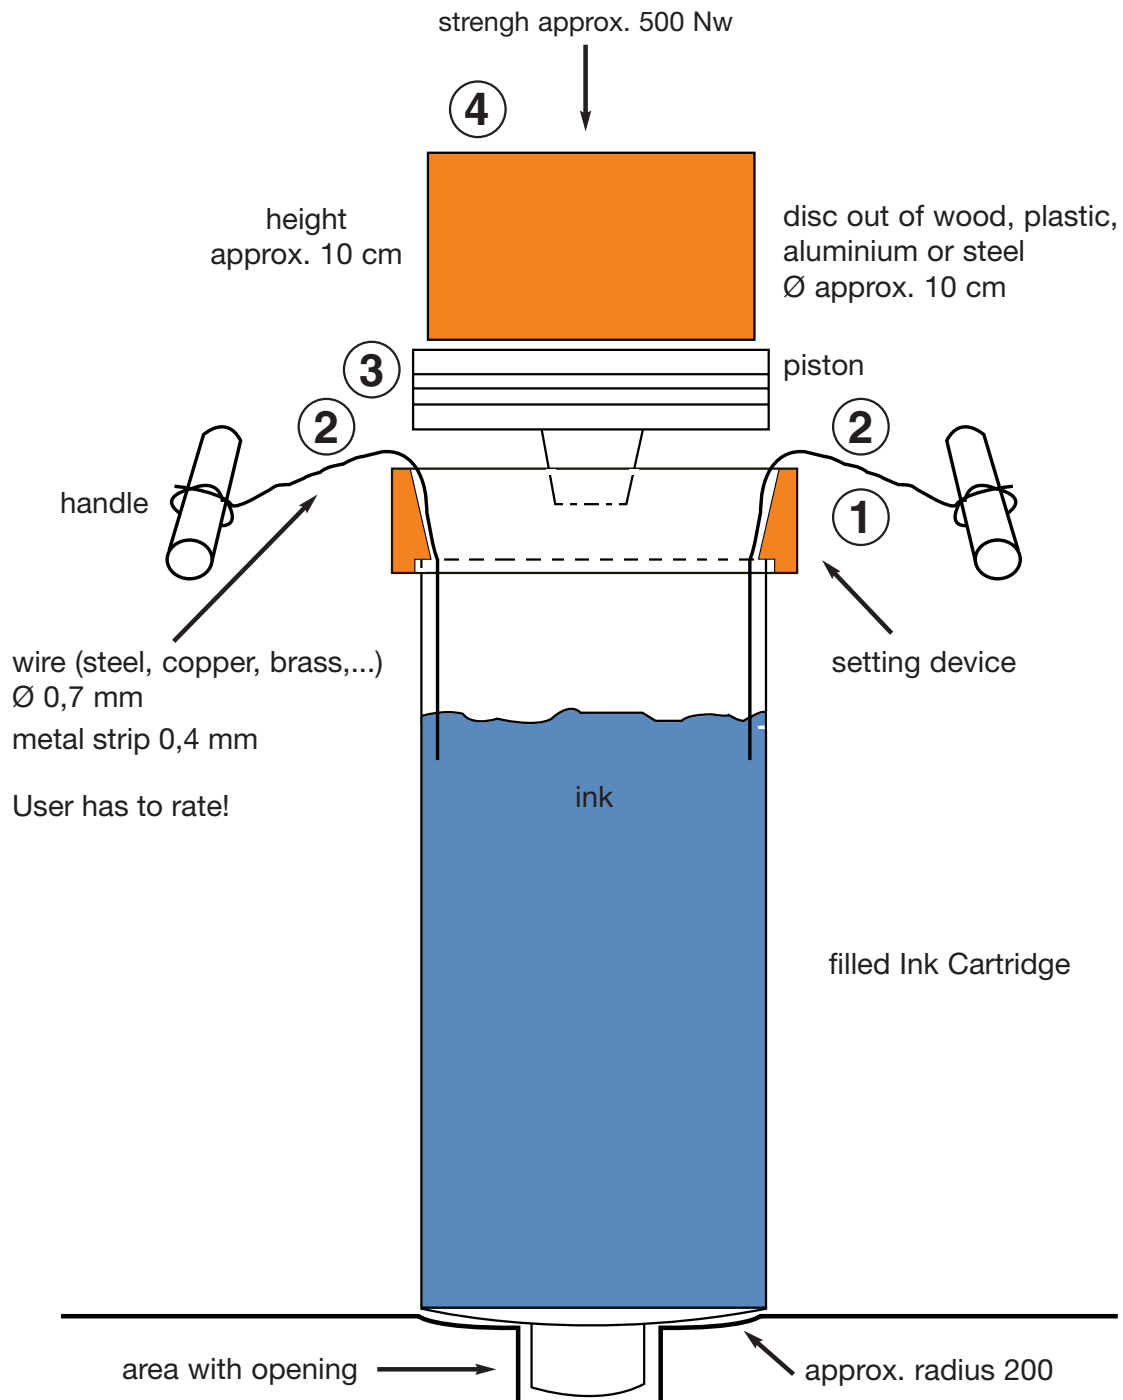

- ① Place the setting device on the cartridge end
- ② Insert the wire into the cartridge along the wall (see picture)
- ③ Insert the piston into the setting device and push it down onto the ink with the plate
- ④ Extract the wire immediately to avoid ink coming out
- ⑤ Clean the strip

*In case of questions please contact the sales department.*